

**You Must**  
Read all the Instructions  
before starting the  
Assembly

**STOP!**  
Before You Assemble  
This House You Must  
Have the EXRP19 Pole  
by S&K MFG Inc



**Step 1. Purchase The EXRP19 Pole by S&K Mfg. Inc.**  
A Strong Heavy Gauge Galvanized Steel Pole

**Step 2. Receive your EXRP19**

**Step 3. Remove the Topper & Rope out of the EXRP19 Pole Box**

**Step 4. Get the Roof Ready for the EXRP19 Pole**


Remove the Roof from the bird house box. Turn the Roof inside out so that the shingle design is on the outside. The hole in the roof will be covered by the Topper (included with the EXRP19) when installed on the EXRP19 Pole. (pole sold separately)

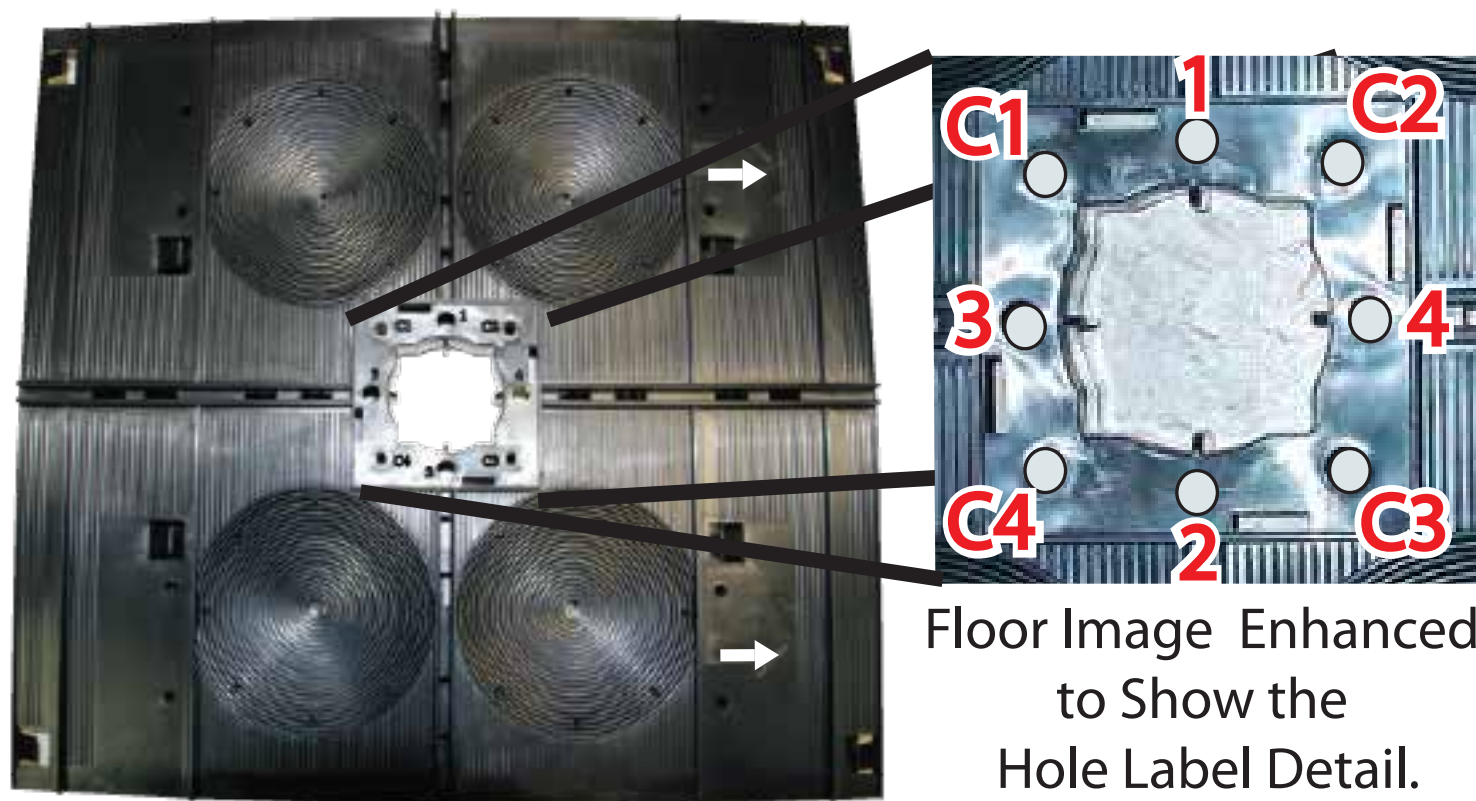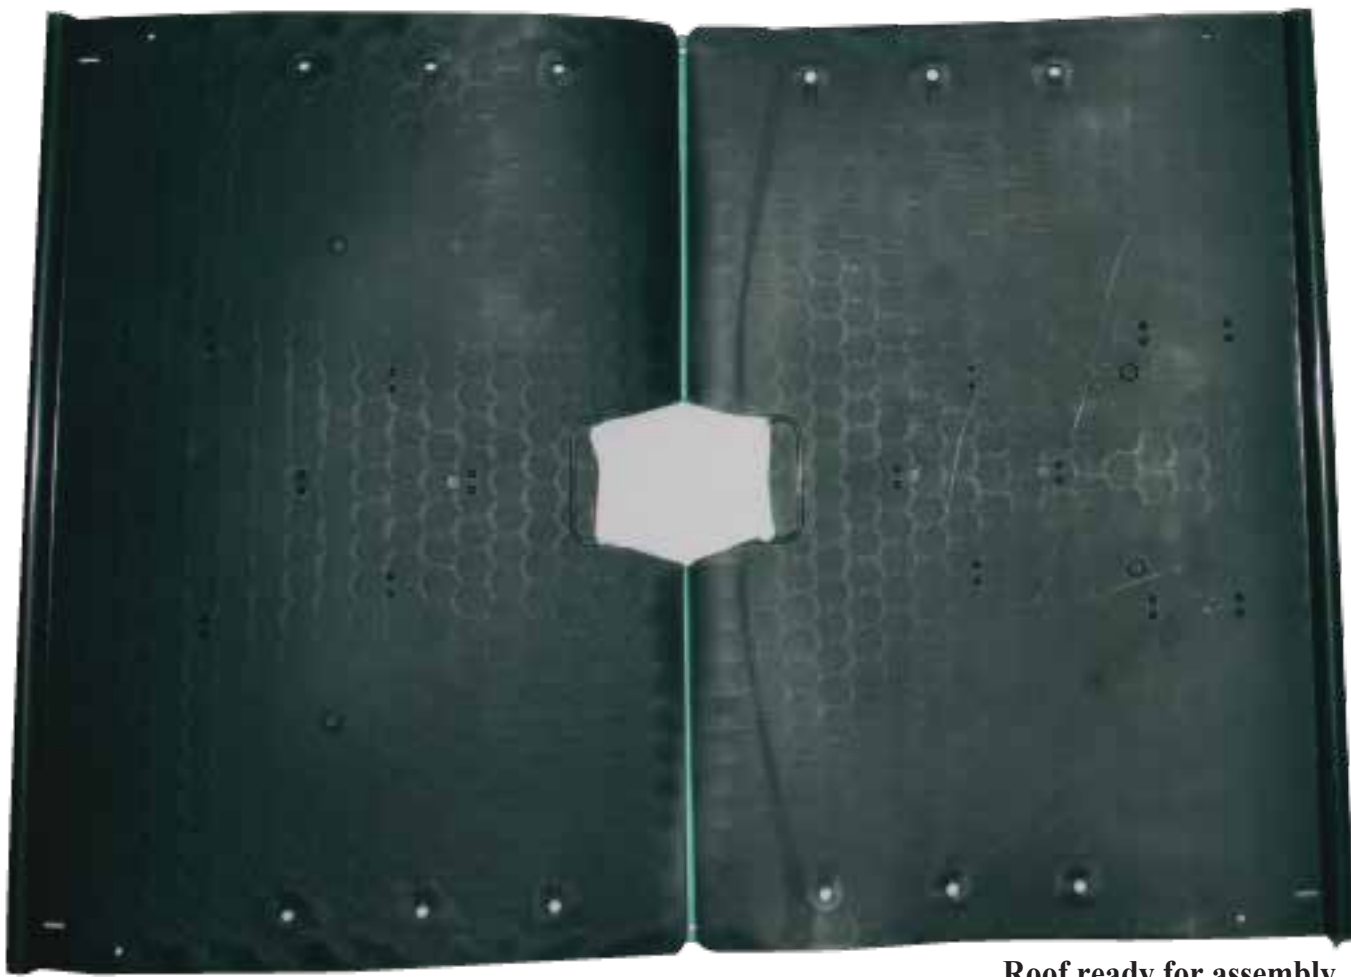

**Step 5. Feed the Rope Through the Topper**

Pull one end of the rope through pole topper (Fig. 1). Keep rope tangle free. Take the two ends of the rope and put them through the roof top opening (Fig. 2). Then continue through the attic floor (Fig. 3). Ensure the two floor sections face in the same direction. Run one end of the rope through Hole (1) on the 2nd floor (Fig. 4a) and the other end of the other rope through hole (2). The ends of the rope MUST go through the same Holes on the 1st floor (Fig. 4b) as they did on the 2nd floor (Fig. 4a), separate the ropes and make sure they are not tangled. Take the rope from hole (1) on the 2nd floor (Fig. 4a) and insert it into Hole (1) of the 1st floor (Fig. 4b). Now take the rope hole (2) from the 2nd floor (Fig. 4a) and insert it into hole (2) of the 1st floor (Fig. 4b). Ensure plenty of rope has been pulled through each hole. Then separate the two floors. Tie the two ends of rope with a loose double knots below the bottom floor (Fig. 5). This way the rope will not pull back through the floors during the rest of the assembly process.


**Fig. 1**

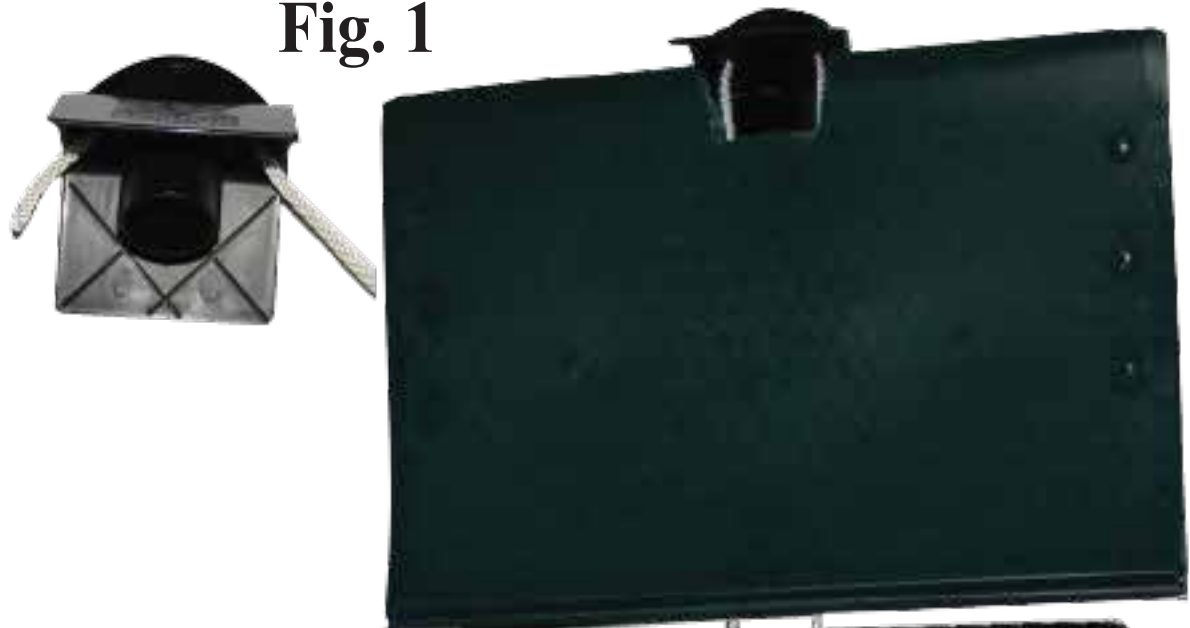

**Fig 2.**




**Fig 3.**

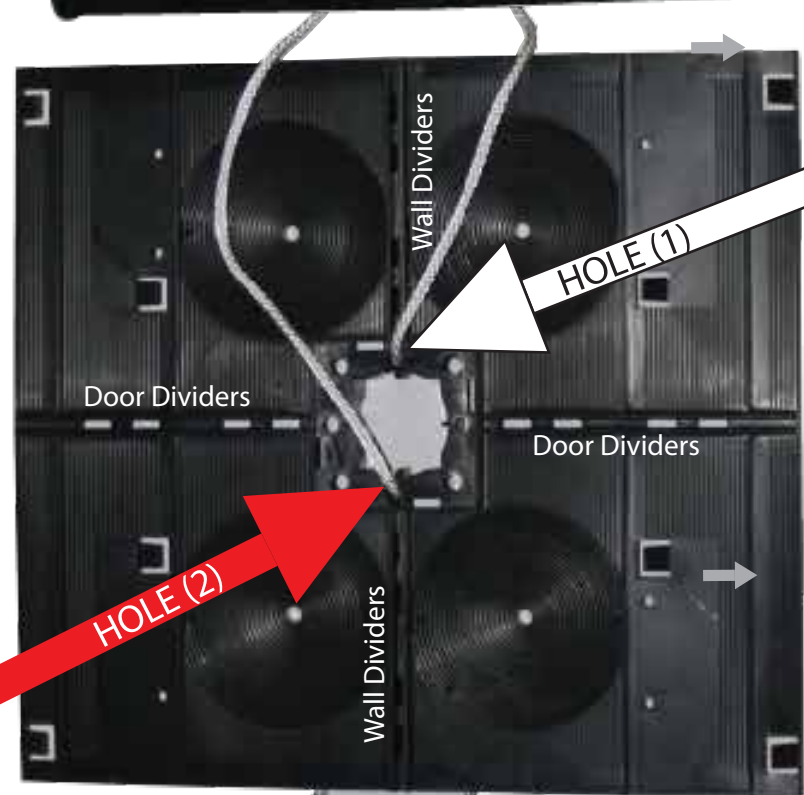

White Arrow shows the same side of rope must be going into the same hole (1) on each floor.

**Fig 4a.**  
SECOND FLOOR

Red Arrow shows the same side of rope must be going into the same hole (2) on each floor.

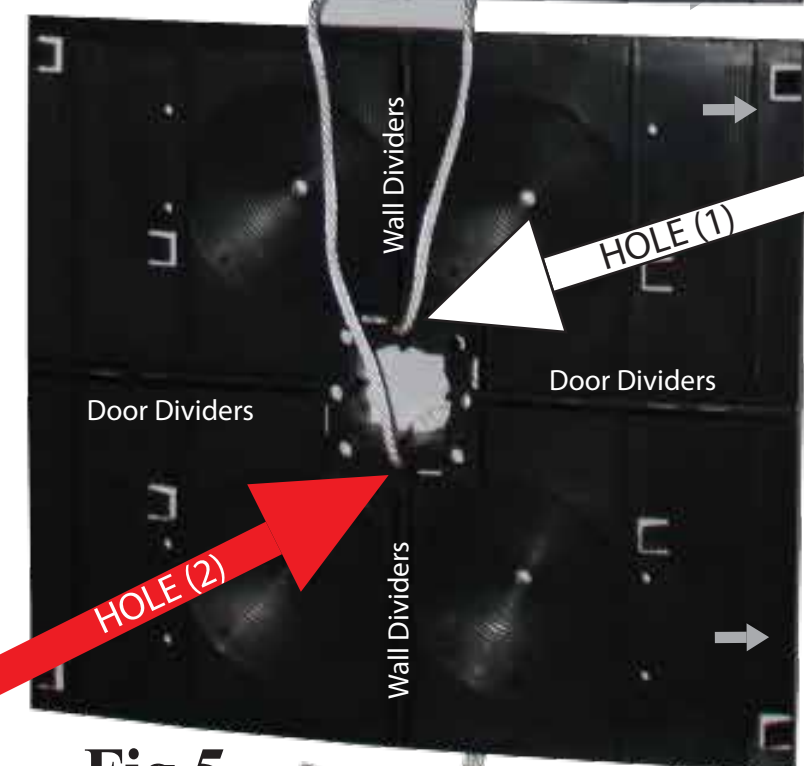

White Arrow shows the same side of rope must be going into the same hole (1) on each floor.

**Fig 4b.**  
FIRST FLOOR

Red Arrow shows the same side of rope must be going into the same hole (2) on each floor.

**Fig 5.**

Scan Here to call Us Scan Here for Website  
PACKED IN MISSOURI MANUFACTURING, INC  
[www.skmfg.com](http://www.skmfg.com)  
**1-800-764-8688**