

INSTRUCTIONS

BH6



Revised: 09-2004

S&K 6 Family Purple Martin House

Parts list:


- 1 Roof
- 1 Floor
- 2 Tan Sides
- 2 Door Panels
- 1 Attic Floor
- 1 6x18 Divider
- 2 6x12 Divider
- 1 bag of 24 White Snaps

IF ANY ITEMS ARE DISCOVERED MISSING, CALL 1-800-764-8688 · DO NOT RETURN TO STORE.


Please read all directions before starting assembly.




Step 1: Begin with one of the floors. Note the arrow imprinted into the plastic. Place the floor on a hard surface.

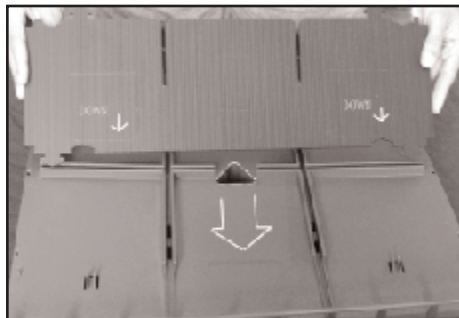

Step 2: Take a 6x18 black divider. The side with the outer most "arrow" snaps goes down. The word "Down" is also printed on the divider.

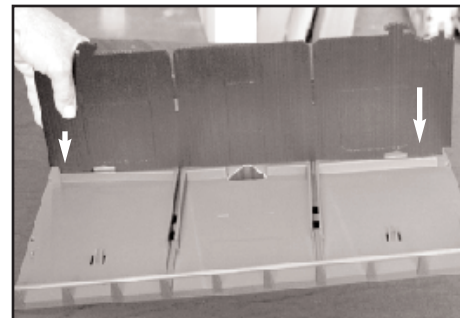

Step 3: Insert the Arrows into the outer holes of the middle channel on the floor. Press firmly. You will feel the Arrows snap into place.

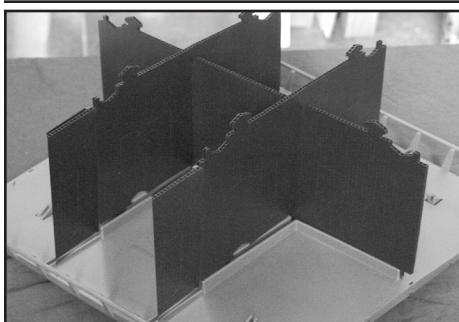


Step 4: Interlock two 6x12 dividers via the slots in the 6x18 black divider.




Step 5: Press firmly on each end of the 6x12-inch dividers until you feel the Arrows snap into place.




Step 6: IF USING AN S&K Tri-Tel/Quad-Tel Pole or adapter, push the center pole guide area of the 6x18 black divider. Note the perforations for this.

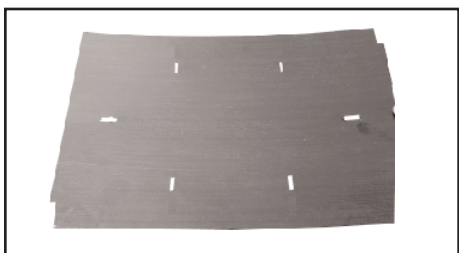

Step 7: Using the large black attic floor, punch out the 6 perforated rectangular slots completely.

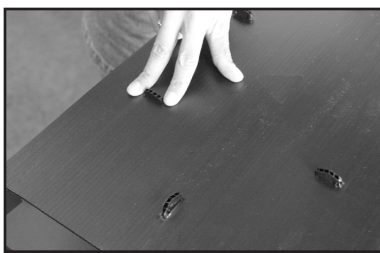

Step 8: Set the attic floor on the top of the second floor's wall dividers. Line up the divider's arrows with the slots in the attic floor and push each arrow through individually, by placing your fingers on each side of the slot and pushing down firmly.

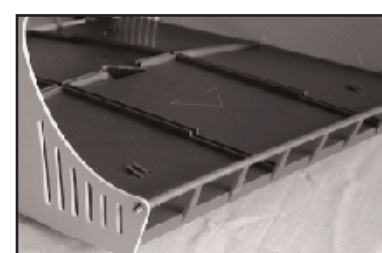


Step 9: Take one house side - with the textured side facing out - and place it on the side of the house. Line up the perch rails' points as shown.


Push the rail's end tabs through each of the openings on each side of the house.



Step 10: Insert three snaps on each side of flooring (2). Snaps insert through the bottom of the walls, into fittings in the flooring. Only 3 per side as shown, (3).

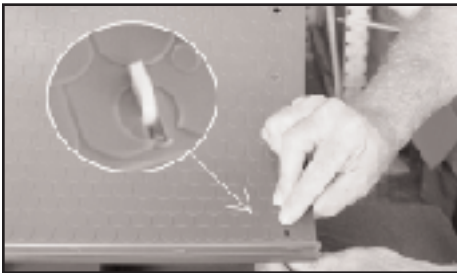

Step 11: Set "slot and key" at top of house walls into roof (4). Gutter should face up, aligned with the rails of the bottom floor.

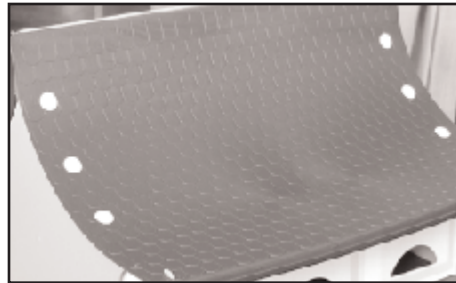

Step 12: Starting at the roof peak, place snaps down each side of the roof to the eaves. Line up roof holes with the snap holes in the tan sides.



Step 13: Install doors by inserting tab C to opening C on each side. Allow door to swing down and snap into place.



Step 14: Your Purple Martin house is ready to be placed on a Tri Tel Pole or S&K Adapter by inserting the Tri-Tel Pole's A pole, with the first two push in buttons (snaps) going fully into the house. The Pole will be wedged into the ceiling peak. (14) The house will rest on the third snap button from the top.
 Note: The Tri-Tel Pole is a universal pole. The push in buttons are usually used for securing additional houses and products made by S&K.



S&K Manufacturing, Inc.
 1001 Liberty Industrial Drive
 O'Fallon, Mo 63366
www.skmg.com

1-800-764-8688
 Fax: 636-272-4044
 Local Line: 636-272-4014