

INSTRUCTIONS

BO11P




BoEleven Plus

Parts List


- 2 Black Inner Gourds
- 2 White Outer Gourds
- 1 Gourd Neck
- 1 Oval Access Cap
- 1 3 1/2-inch Porch with Perch
- 1 Crescent Door Cover
- 1 Round Door Cover
- 1 BTE
- 4 ea. - 1/2-inch White Snaps
- 6 ea. - 3/4-inch Screws

www.skmfg.com
1-800-764-8688

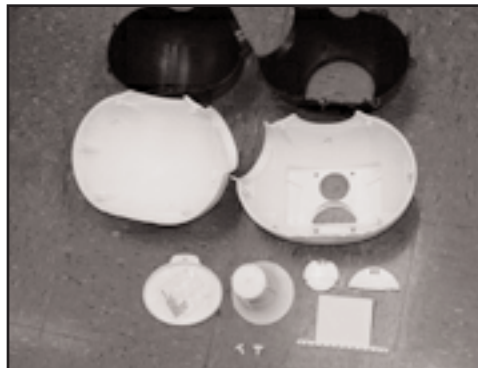


STEP 1 BLACK INNER GOURD

Start at the top at oval opening. Insert the two alignment tabs. Applying pressure, push snap in rectangular hole. (Listen for a snap.) Slowly walk the process around the inner gourd, repeating the above steps. If you need to take black inner gourd apart, place a flat screwdriver at front part of tab and work tab out.

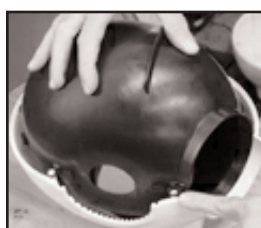

STEP 2 WHITE OUTER GOURD

Place the black inner gourd inside the front section (entrance face down) of the white outer gourd. Be sure to line up the black rings over the six screw holes.

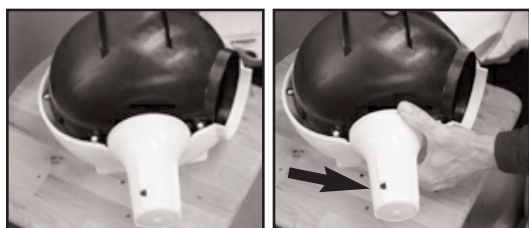

STEP 3 SET THE HANGING DIRECTION

Slide gourd neck in place with hanger holes in the direction you wish to hang your gourd.



STEP 4 CONNECTING WHITE GOURD SECTIONS

Connect the back outer white gourd section to the front section starting at the neck cap, working your way around the gourd until all of the tongue and groove has engaged.



STEP 5 CONNECTING THE WHITE GOURD

Place gourd on a table with entrance side down. Put six screws in screw holes. Slowly tighten screws with a 6-inch extension on your electric drill. You will know screw is tight when the two sides pull together and the drill torques. **DO NOT OVER TIGHTEN.** (Over tightening will cause you to pull the screw head through the plastic.) If you over tighten the screw, you must pull the screw out, and then you can replace it with a one inch drywall screw (not included).

NOTE: For best results start with second hole to the right from clean-out inspection hole (oval opening) working your way around the gourd **CLOCKWISE**, completing the clean-out inspection oval hole last.



IF ANY ITEMS ARE DISCOVERED MISSING, CALL 1-800-764-8688
WWW.SKMPG.COM



STEP 6 ADDING THE PORCH

Before adding your porch, see Option 1 through Option 5 below.

To add the porch, line up the bottom holes of the Porch to the holes below the gourd entrance. Push a Snap through each of the bottom openings of the Porch and into the Gourd's corresponding holes. When completely entered, the snaps will secure the porch in place.

STEP 7

Hang the Best Gourd ever made and give the Martins the Best Home ever made by man.

Options Available (Not Included)



COOLING CAP

OPTION 1

Code: CC

To get ventilation when using the cooling cap you must remove the top of the gourd using the guides. Put the cooling cap over the top of your gourd.



ADDING TUNNEL

OPTION 2

Code: UTC or UTRS

To add a tunnel to your gourd, remove the front of the entrance by using the guides. Each corner of the entrance has a pre-set pinhole; using a 1/4-inch drill bit, drill all four corners. Attach your tunnel with white 1/2-inch push snaps.




ADDING PLATE ENTRANCE

OPTION 3

Code: BPE, CPE, or SRPE

Each corner of the gourd entrance has a pre-set pinhole. Using a 1/4-inch drill bit, drill all four corners. Attach your plate entrance with white 1/2-inch push snaps.

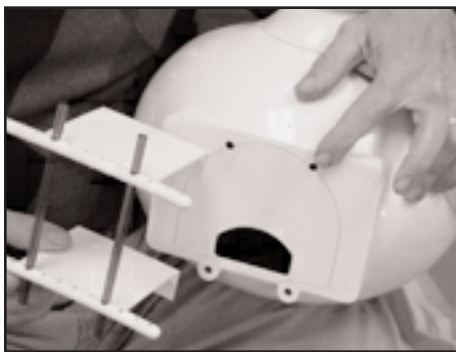

ADDING AN OWL GUARD

OPTION 4

Code: OGBO

To add an owl guard, put the two small rods in the holes on the porch with perch, and then attach the second porch with perch to the top of the small rods. Attach your owl guard with two white 1/2-inch push snaps to the pre-drilled holes on the bottom of the gourd entrance, and then attach the top of the owl guard to the pre-drilled holes at the top of your gourd entrance with your two white 1/2-inch push snaps.

**IF ANY ITEMS ARE DISCOVERED MISSING, CALL 1-800-764-8688
DO NOT RETURN TO STORE.**



S&K Manufacturing, Inc.
1001 Liberty Industrial Drive
O'Fallon, Mo 63366
www.skmfg.com
1-800-764-8688
Fax: 636-272-4044