

• 2 Pillar Dividers




Special Note: The ropes must be inside the pillar. Wrap the Pillar around the Ropes

Step 6: Fold the Pillar into a square, they lock in place.
NOTE: The "UP" arrow goes on the OUTSIDE of the Pillar.

Step 7: The Pillar has tabs that will snap into the center section of both floors. Together

Step 8: Insert the tabs into the corresponding holes in the floor until they lock into place.

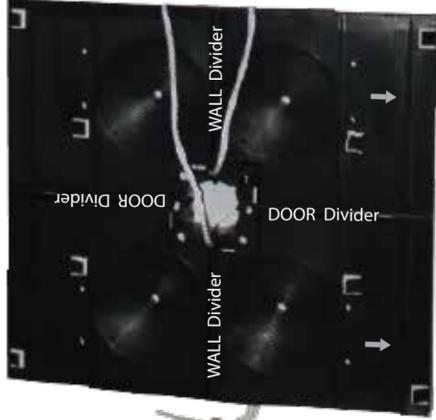

Step 9: Insert the two dividers as shown. Ensure the tabs are locked into the corresponding holes on the floor and the pillar.

Insert the two dividers as shown. Ensure the tabs are locked into the corresponding holes on the floor and the pillar.




Wall Divider Install

• 4 Wall Dividers




Step 10: The door dividers will snap into the entrance side of the floor.
(NOTE the tabs and the arrows in the floor indicate the entrances of the house.)

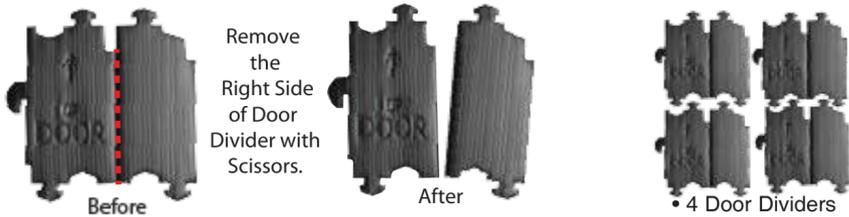


Remove the Right Side of Door Divider with Scissors.

• 4 Door Dividers

Separate the door dividers at the perforation.
Note: The side with the "UP" mark is for Step 10.
The right side may be saved to become a porch divider, if desired.

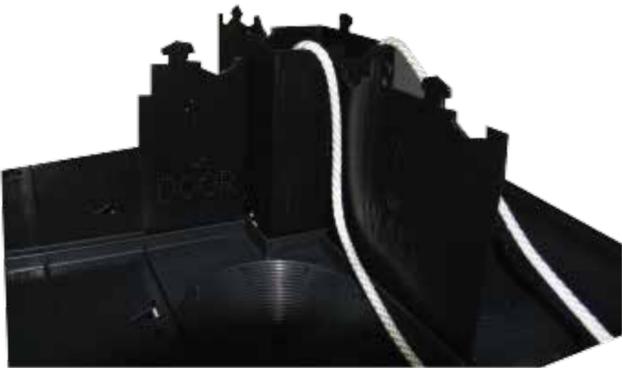

Step 11: Place the second floor on top of the dividers. Be sure the floors are turned in the same direction. Push the tabs of the standing dividers into the corresponding holes. Insert the second Pillar (around ropes as in step 1) add dividers on the second floor exactly as the first floor (Steps 6-10).

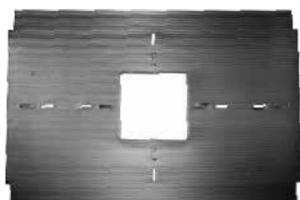

• 1 Attic Floor

Step 12: The attic floor fits over the top Pillar, and allows the corresponding tabs from the dividers on the second floor to be pushed in place on the attic floor.

NOTE: If the House appears **WARPED** at this point, do not worry. It will straighten during the following steps.




Step 13: Turn house on its side. Take one house side with the textured side facing out and place it on the side of the house. Line up the holes on the house wall with the corresponding holes in the floors of the house.

WARNING: YOU MUST LINE UP THE HOLES BEFORE INSERTING THE WHITE SNAPS.


Step 14: Be sure the corresponding holes in the side walls and the floors are lined up before inserting snaps. (Shown in the next step). The smaller holes are where the perches are (perches sold separately) to be inserted.

Step 15: Ten snaps go into each side of the house. Be sure to push the snaps in all the way. Do the same as explained in steps 13, 14, and 15 on the opposite side wall.

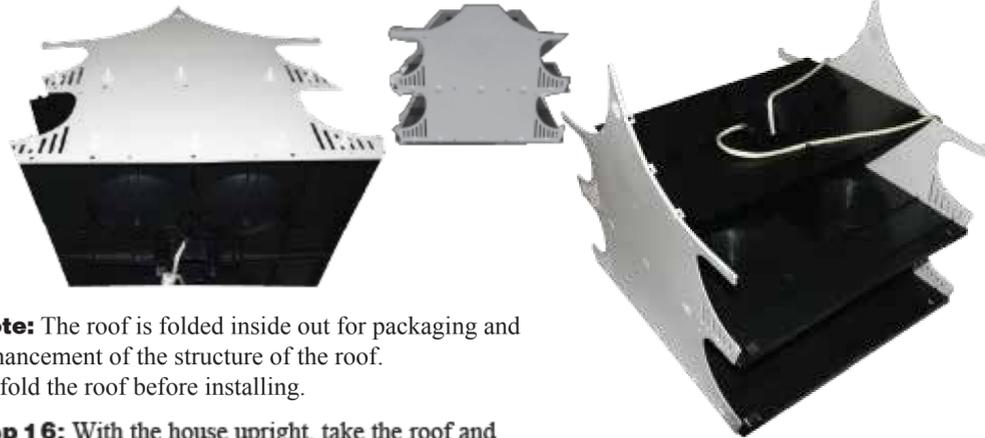

Note: The roof is folded inside out for packaging and enhancement of the structure of the roof. Unfold the roof before installing.

Step 16: With the house upright, take the roof and place it over the house. At each corner of the roof, you will find an alignment hole that corresponds with a slide tab. Push the small tab through the pre-cut hole to attach the corner of the roof (all 4 corners) and slide into place.

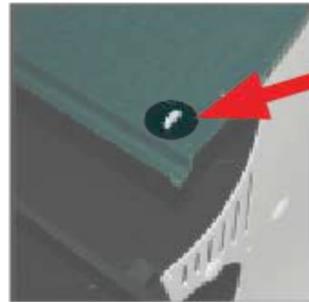

and slide into place.

Step 17: Starting at the roof peak, place snaps down each side of the roof to the eaves. Line up roof holes with the snap holes in the side walls.



Step 18: The four door panels are attached by inserting the end tabs through the molded holes in the side panel as shown. The door panels will swing up. Press the floor tabs behind each door panel until they snap into place.



HELPFUL HINTS TO CLEAN AND INSPECT:
To gain access to the inside of the Great Eight Martin House, the doors swing up and down. To open, press down on the two tabs on the flooring. Pull the bottom of the door upward. When closing, close door until the floor tabs click into place.

You Have Finished The Assembly of the Great Eight Martin House for the EXRP19
See Pole instructions for Assembly of pole and mounting of House.