


# PERCH KIT v2

# INSTRUCTIONS

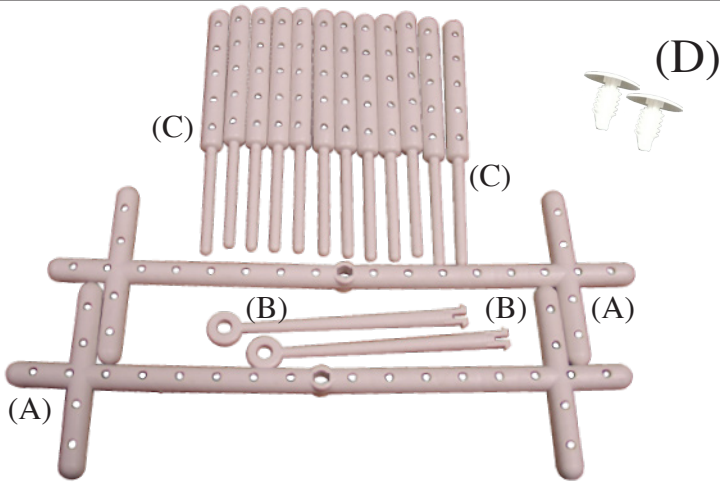


## Parts List:

- (A) Antenna Top (Qty 2)
- (B) Antenna Stem (Qty 2)
- (C) Perches (Qty 12)
- (D) 1/4" Dia. Snaps (Qty 2)

### Assemble the Antennas

Using the Antenna Top and Stem (Fig.1) Insert the Antenna Stem (B) into the Antenna Top (A) as shown in Fig 2 until it snaps into place (Fig.3). Once it is snapped into place it will not come out.

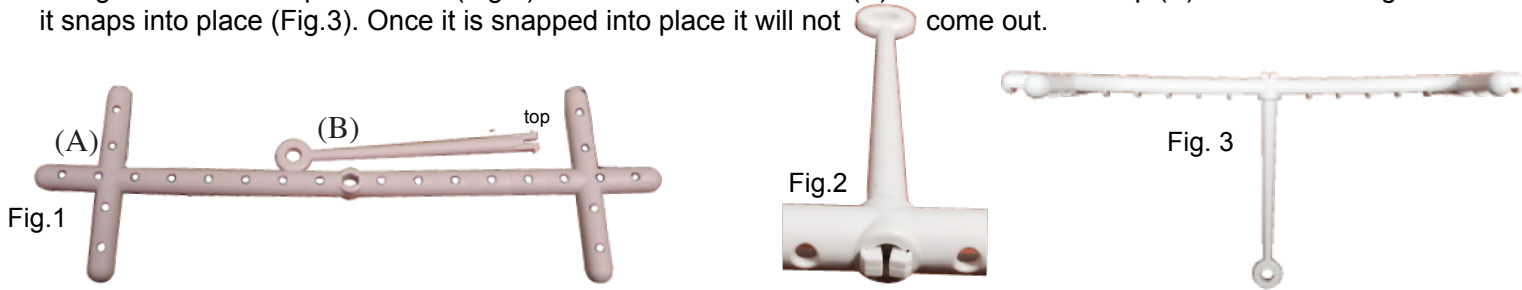

### Install the Antennas

 Tools Required: \*Scissors \*1/4" drill bit \*Drill

**Step 1:** Make a drill mark inbetween the ledge on the side and the top of the side. Making sure the mark is directly under the hole in the roof.



**Step 2:** Drill a 1/4" hole on your mark



**Step 3:** Use Scissors and make a slit from the end of the roof to the circle in the peak of the roof (Do not cut past the circle)



**Step 4:** Insert the snap into the Antenna. Now insert the Antenna into the hole and align the snap up with the 1/4" hole and push the snap into place. (On the House models leave the snap half out to insure proper alignment)



### Install the Perches

**Step 5:** Repeat steps 1-3 on the other side of the martin house/barn.

